

DTP9750 4G LTE

- 1.44 TFT display • LTE Enabled
- GPS Function Optional • Private Call • Group Call

 
USER'S MANUAL

Checking Equipment

Carefully unpack the device. We recommend that you identify the items listed in the following table before discarding the packing material. If any items are missing or have been damaged during shipment, file a claim with the carrier immediately.

ACCESSORIES


ITEM	QUANTITY
ANTENNA	1
CHARGER	1
ADAPTER	1
Li-ion BATTERY	1
BELT CLIP	1
USER'S MANUAL	1



ANTENNA



Li-ion BATTERY

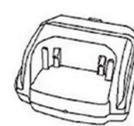

CHARGER







ADAPTER



BELT CLIP



USER'S MANUAL

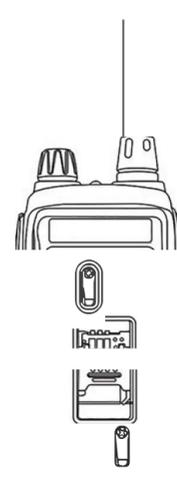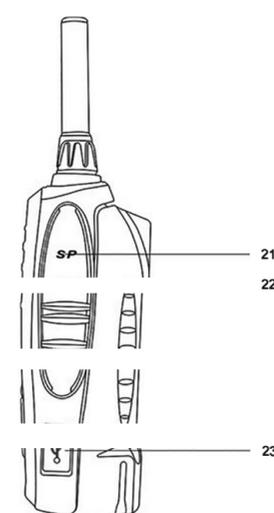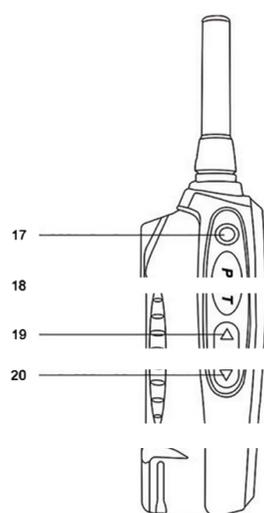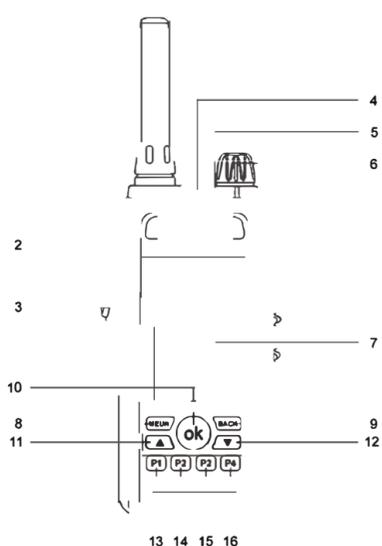

24

1. Antenna
2. Speaker
3. Microphone
4. LED Flashlight
5. Indicator Lamp
When first powered on: LED will flash Blue while radio powers up.
A rapid Blue flash will start once a valid network is detected and radio 'Logs In'. Once logged into the network, blue flash will slow to once every 5 seconds (It can take up to 20 seconds to acquire network).
Led will turn Red when the PTT is pushed and radio transmits.
LED will turn blue during receive.
LED will turn Red when radio is switched off until it is logged off the network.

6. Power Switch and Volume Control
7. LCD Indicator
8. MENU Key
Display the menu or select functions.
9. BACK Key
Back to the previous menu or Cancel to stop the current operation
10. OK Key
Enter or select a menu function.
11. Up Key
Up Key, short press -- the chosen item in the menu or list moves up one line.
12. Down Key
Down Key, short press -- the chosen item in the menu or list moves down one line.

13. P1 Key
14. P2 Key
15. P3 Key
16. P4 Key
P1 to P4 are programmable quick access preselects for group or individual group member.
A long press can store the current chosen group or group members in the corresponding key. A short press of key will recall the group or group members stored in the keys.
(Note if an individual member is programmed into a particular key and that member is 'off air', pressing the key will indicate a failed response.

17. Orange Key
Short press - Toggles on/off LED flashlight
18. PTT (Push-to-Talk) Key
19. Up Key
Short press - Moves cursor in some menu options to top of list.
20. Down Key /Key Pad Lock
Short press -- Moves cursor in some menu options to bottom of list.
Long Press toggles Key Pad lock on/off.
21. Speaker jack
22. Microphone jack
23. Mini USB charger jack
Radio can be charged via a standard USB Mini cable.
24. Micro SIM Card Slot

Basic Operations

Power on

Turn on/off volume switch clockwise to power on.

1. Led will flash blue as the DTP9700 powers up.
2. LCD will display Logo and Startup > Welcome message
3. LCD will display 'Landing' text once a network is identified (This can take 20 seconds)
4. Once logged onto a network the LCD will display signal strength in the top left and battery capacity in the top right. User address and radio groups if available are also displayed on LCD.
5. Blue status bar will indicate 'Idle status'

Power off

Turn the volume switch counterclockwise to power off. The red LED will illuminate and the LCD will display the 'Off' icon during shutting down process. This takes about 5 seconds.

Transmitting

Press the PTT and the red LED will illuminate indicating the radio is in transmit mode. When in the transmitting mode, the LCD Blue status bar will indicate 'my turn to talk'.

Receiving

When the blue LED is illuminated, it indicates radio is receiving a transmission. The blue status bar will indicate the receivers name or identity.

Group Switching

1. Press the 'MENU' key and then push 'OK' to select 'Choose Group'.
2. Short press ▲ or ▼, to choose the group you want to use.
3. LCD display will now indicate the group the radio will transmit to when pushing the PTT.

Selective Call

There are two kinds of selective calls. Group selective calls and individual member selective calls.

1. Press the 'MENU' key and then push 'OK' to select 'Choose Group'.
2. Short press ▲ or ▼, and choose the group the user belongs to. Press 'OK' to select.
3. Short press ▲ or ▼ to choose the individual one you want to talk alone and press 'Menu' (add) key.
4. The display will indicate 'Temporary Group - Calling' and the individual name.
5. Press the PTT to initiate communication.
6. If PTT is not pushed within 120 seconds, radio will revert to default group.

LED Flashlight Function

Short press the 'Orange key' to turn on LED flashlight at the top of the radio.

Advanced Functions

Dispatch Message

The radio can receive dispatch text messages. On receipt of a text message an icon (Double Envelope) will appear on the top blue status line of the LCD. To read message:-

1. Press 'MENU' key.
2. Short press ▲ or ▼, choose the 'Dispatcher MSG' from list.
3. Press 'OK' key then you can read the message list.
4. Short press ▲ or ▼, choose the message you want to read then press 'OK' key to check it.
5. Unread messages are identified by a closed envelope icon next to the message.

Messages are limited to 20 characters. Radio will store last 5 messages.

SOS Function

Long press the 'Orange key' for emergency call.

Locking key function

You can set automatic lock or manual lock in the 'Setting' list.

1. Press 'MENU' key into the list.
2. Short press ▲ or ▼ choose settings in the menu list and press 'OK' key.
3. Short press ▲ or ▼ choose the 'Autolock' and press 'OK' key.
4. Short press ▲ or ▼ to change the option On or Off then press 'MENU' key to save selection.
5. Press 'MENU' key to save the data or press 'BACK' to cancel the operation.
6. When the Automatic Lock is on, all keys other than the PTT and orange flashlight key will automatically lock after 10 seconds.
7. Long press of the down key on left side of radio will temporary unlock keys.

Backlight Mode

The backlight can be set in 'Setting' Menu. It can be set to:

Auto: Backlight will turn on automatically when any key is pressed or if radio receives a transmission. If there is no operation for 10 seconds, Backlight will turn off automatically.

Keys: Backlight will not turn on when the PTT is pressed or radio receives a transmission. Backlight will turn on if any other key is used and remain on for 10 seconds.

Open: LCD backlight remain on.

Keypad Beep Setting

This function can be set in 'Setting' Menu. It can be set to:

On: Beep sound emitted when a key press is operated.

Off: No sound emitted with key press.

Roger Beep function can be set in 'Setting' menu. It can be set to:

On: A beep tone is emitted when the PTT is pressed or released indicating start or end of transmission mode.

Off: No beep tone is emitted during PTT operation.

Language Selection

This function can be set in 'Setting' Menu. It can be set to:

English: LCD menu will display in English and voice prompt is English speech.